

Mettler Toledo

Set up and calibration

1. Press down cursor ↓
2. Select ◆
3. Press Down To scale
4. Press Right to enter scale
5. Press ENTER on Capacity and Increments
6. Press Enter to enter value (**400 – 0.1**)
7. Press back (arrow on the far left of the screen) to scale then Down to Calibration
8. Press ENTER on Calibration
9. Select Geo code enter in accordance with location (Syspal GeoCode 21)
10. Press down until this symbol Appears →**0**← and select
11. Follow on screen instructions to capture ZERO
12. Press back once complete
13. Select symbol →**||**←
14. Select test weight and enter value of Your test weight press start and follow in screen instructions
15. Press back until on main screen this should display the weight you have loaded

Load Cell Wiring

- + EXC = RED
- + SEN = LINK WITH + EXC
- + SIG = GREEN
- SIG = WHITE
- SEN = LINK WITH - EXC
- EXC = BLACK

CLEAR TO EARTH

